



Pos	Description	Art.code
1	Hex.Soc.Hd.Bolt	FXW30104080766
2	Bushing, Deflector	FXW21030000001
3	Deflector, Exhaust	FXW21030010015
4	Hex.Soc.Hd.Bolt	FXW30104200866
5	Cap, Machined	FXW210300200XX
6	Gasket, Cap	FXW21030130000
7	Seal	FXW21030190017
8	Piston Stopper	FXW21030140016
9	O-Ring	FXW30700123000
10	O-Ring	FXW30700125000
11	Spring	FXW21030160000
12	Piston,Head Valve	FXW21030150216
13	O-Ring	FXW30700120000
14	O-Ring	FXW30700126000
15	Cylinder Spacer	FXW21030340116
16	O-Ring	FXW30700044000
17	O-Ring	FXW30700119000
18A	Driver Assembly	FXW21150461100
19	O-Ring	FXW30700013000
20	Cylinder	FXW21030350200
21	Bumper	FXW21030470115
22	Driver Guide	FXW21150480001
23A	Body Assembly	FXW208006021XX
24	O-Ring	FXW30700185000
25	End Cap	FXW207707X02XX
26	O-Ring	FXW30700079000
27	O-Ring	FXW30700081000
28	Valve	FXW20770900016
29	O-Ring	FXW30700002000
30	O-Ring	FXW30700201000
31	O-Ring	FXW30700071000
32	Valve Plunger	FXW20770910016
33	Spring	FXW20770960001
34	O-Ring	FXW30700080000
35	Plunger	FXW22220920100
36	Plunger Cap	FXW20770930016
37A	Trigger Assembly	FXW22220952215
38	Spring Pin	FXW30803240001
39	Pin Trigger	FXW20460890001
40	Grommet	FXW30700078000
41	Guide, Contact Trip	FXW22282840215
42	Spring, Safety	FXW21031490101
43	E-ring	FXW31303000001
44	Adjusting Nut	FXW20801600001
45	Adjusting Post	FXW20801500101
46	Adjusting Spring	FXW20771630001

Pos	Description	Art.code
47	Ball,Steel	FXW31200200000
48	Contact Trip, Upper	FXW22281480066
49	Lower Safety Lever Assembly	FXW21151510101
50	Hex.Soc.Hd.Bolt	FXW30104200866
51	Spring Pin	FXW30803180001
52A	Latch Spring Assembly	FXW21151372066
53	Spring Pin	FXW30804180001
54	Lower Door, Machined	FXW21151340066
55	Nose, Machined	FXW21151350266
56	Nail Guide Liner	FXW21152060001
57	Magazine	FXW21152050206
58	Hex.Soc.Hd.Bolt	FXW30505080166
59	Spring Stopper	FXW20142230001
60	Hex.Soc.Hd.Bolt	FXW30104060166
61A	Pusher Assembly	FXW21152131001
62	Spring Lock	FXW20252240016
63	Spring	FXW21152210001
64	Magazine Cover	FXW21152200106
65	Spring Stopper	FXW21152310001
66	Latch	FXW21152280066
67	Spring Pin	FXW30803080001
68	Spring	FXW21152330001
69	Hex.Soc.Hd.Bolt	FXW30104180166
70	Flat Washer	FXW30900010001
71	Magazine Cap	FXW21152180015
72	Locknut	FXW30604070066
73	Magazine Cover Stopper	FXW21152220001
74	Bracket	FXW21152170066
75	Hex.Soc.Hd.Bolt	FXW30104080266
76	Hex.Soc.Hd.Bolt	FXW30104140166
77	Rubber Pad	FXW21151580015
78	Clip	FXW21151590001
79	O-Ring	FXW30700136000
<b>Optional Parts</b>		
80A	Belt hook Assembly	FXW20970832515
80A-1	End Cap	FXW209707X03XX
80A-2	Belt hook	FXW20970830115
80A-3	O-Ring	FXW30700188000
80A-4	Cover,Belt hook	FXW20970840001
80A-5	C-ring	FXW33425000001