



Pos	Description	Art.code
1	Hex.Soc.Hd.Bolt	FXW30106140866
2	Bushing	FXW20790000001
3	Deflector,Exhaust	FXW20790010115
4	Hex.Soc.Hd.Bolt	FXW30106250866
5	Cap	FXW230100200XX
6	Piston Stopper	FXW21340140217
7	Head Valve Spring	FXW21340160000
8	O-Ring	FXW30700175000
9	O-Ring	FXW30700222000
10	Piston Head Valve	FXW23010150000
11	O-Ring	FXW30700113000
12	Piston Head Valve	FXW23010260000
13	Head Valve Ring	FXW23010280001
14	Gasket	FXW20940130000
15	O-Ring	FXW30700104000
16	Retaining Ring	FXW20940340016
17	O-Ring	FXW30700019000
18A	Driver Assembly	FXW23010461001
19	Seal	FXW21340250017
20	O-Ring	FXW30700281000
21	Cylinder	FXW23010350000
22	O-Ring	FXW30700280000
23	Bumper	FXW23010470015
24	Driver Guide	FXW23010480001
25A	Body Assembly	FXW225706012XX
26	O-Ring	FXW30700118000
27	End Cap	FXW209407X00XX
28	O-Ring	FXW30700079000
29	O-Ring	FXW30700081000
30	Valve	FXW20770900016
31	O-Ring	FXW30700002000
32	O-Ring	FXW30700201000
33	O-Ring	FXW30700071000
34	Valve Plunger	FXW20770910016
35	Spring	FXW20770960001
36	O-Ring	FXW30700080000
37	Plunger	FXW22220920100
38	Plunger Cap	FXW20770930016
39A	Trigger Assembly	FXW22220952215
40	Spring Pin	FXW30803240001
41	Grommet	FXW30700078000
42	Trigger Pin	FXW20770890101
43	Guide, Contact Trip	FXW22572840015
44	Spring , Safety	FXW20791490001
45	Door,Latch	FXW20793680001
46	Nose	FXW23011350066

Pos	Description	Art.code
47	Door	FXW23011340066
48	Spring Pin	FXW20971170001
49A	Latch Door Assmby	FXW23011361001
50A	Lower Safety Lever A	FXW23011511101
51	Safety Cover	FXW23011520001
52	Hex.Soc.Hd.Bolt	FXW30105080266
53	Pusher	FXW23012130001
54	Spiral Spring	FXW23012090000
55	Roller	FXW20792110016
56	Spring Pin	FXW30804180001
57	Magazine	FXW23012050006
58	Magazine Cap	FXW23012180115
59	Hex.Soc.Hd.Bolt	FXW30105120166
60	Locknut	FXW30605080001
61	Bracket	FXW23012170001
62	Hex.Soc.Hd.Bolt	FXW30105220166
63	Flat Washer	FXW30900005001
64	Locknut	FXW32805080001
65	Spring	FXW21572620001
66	O-Ring	FXW30700157000