



| Pos | Description | Art.code |
|-----|-----------------|----------------|
| 1 | Cap | FXW23240020001 |
| 2 | O-Ring | FXW30700267000 |
| 3 | Seal | FXW23240230000 |
| 4 | Cylinder Seal | FXW23240180015 |
| 5 | O-Ring | FXW30700300000 |
| 6A | Driver Assembly | FXW23240461100 |
| 7 | O-Ring | FXW30700301000 |
| 8 | Cylinder | FXW23240350100 |
| 9 | Bumper | FXW23240470015 |
| 10A | Body Assembly | FXW233445210XX |
| 11 | O-Ring | FXW30700302000 |
| 12 | Valve Plunger | FXW23240910216 |
| 13 | O-Ring | FXW30700238000 |
| 14 | O-Ring | FXW30700233000 |
| 15 | Valve | FXW23240900000 |
| 16 | O-Ring | FXW30700303000 |
| 17 | Seal | FXW23241030015 |
| 18 | O-Ring | FXW30700158000 |
| 19 | Plunger | FXW23240920116 |
| 20 | O-Ring | FXW30700304000 |
| 21 | Plunger Cap | FXW23240930018 |
| 22 | Trigger Cap | FXW232431702XX |
| 23 | Hex.Soc.Hd.Bolt | FXW31604100166 |
| 24 | Pin | FXW32103240012 |

| Pos | Description | Art.code |
|-----|------------------------|----------------|
| 25 | Trigger | FXW232409500XX |
| 26 | Hex.Soc.Hd.Bolt | FXW30104160166 |
| 27 | Driver Guide | FXW23241330101 |
| 28 | Door | FXW23341340201 |
| 29 | Magazine Cover | FXW23242200210 |
| 30 | Bolt | FXW30504160166 |
| 31 | Spring Pin | FXW30803220001 |
| 32 | Stop(A) | FXW23342450001 |
| 33 | Spring | FXW23242290101 |
| 34 | Cover | FXW232421800XX |
| 35 | Locking Pawl | FXW23242361001 |
| 36 | Nose/Magazine Assembly | FXW23242481201 |
| 37 | Spring | FXW23242210000 |
| 38 | Pin | FXW23242120101 |
| 39 | Roller | FXW23242110101 |
| 40 | Pusher | FXW23242130001 |
| 41 | Magazine Cap | FXW232424601XX |
| 42 | Spring Pin | FXW30803280001 |
| 43 | Stop | FXW23242450015 |
| 44 | Stop(B) | FXW23344470001 |
| 45 | O-Ring | FXW30700256000 |
| 46 | End Cap | FXW232407X0100 |
| 47 | Spring Pin | FXW30804240001 |