



Pos	Description	Art.code
1	Cap	FXW23560020001
2	O-Ring	FXW30700267000
3	Seal	FXW23240230000
4	O-Ring	FXW30700300000
5A	Driver Assembly	FXW23560461000
6	O-Ring	FXW30700301000
7	O-Ring	FXW30700128000
8	Cylinder	FXW23560350000
9	Bumper	FXW23240470015
10A	Body Assembly	FXW233445210XX
11	O-Ring	FXW30700256000
12	End Cap	FXW232407X0100
13	Spring Pin	FXW30804240001
14	O-Ring	FXW30700302000
15	Valve Plunger	FXW23240910216
16	O-Ring	FXW30700238000
17	O-Ring	FXW30700233000
18	Valve	FXW23240900000
19	O-Ring	FXW30700303000
20	Seal	FXW23241030015
21	O-Ring	FXW30700158000
22	Plunger	FXW23240920116
23	O-Ring	FXW30700304000
24	Plunger Cap	FXW23240930018

Pos	Description	Art.code
25	Trigger Cap	FXW232431702XX
26	Hex.Soc.Hd.Bolt	FXW31604100166
27	Pin	FXW32103240012
28	Trigger	FXW232409500XX
29	Hex.Soc.Hd.Bolt	FXW30104160166
30	Driver Guide	FXW23241330101
31	Door	FXW23561340101
32	Magazine Cover	FXW23242200210
33	Hex.Soc.Hd.Bolt	FXW30504160166
34	Spring Pin	FXW30803220001
35	Stop(A)	FXW23342450001
36	Spring	FXW23242290101
37	Cover	FXW232421800XX
38	Locking Pawl	FXW23242361001
39	Nose/Magazine Assembly	FXW23562481001
40	Spring	FXW23242210000
41	Pin	FXW23242120101
42	Roller	FXW23242110101
43	Pusher	FXW23242130001
44	Magazine Cap	FXW232424601XX
45	Spring Pin	FXW30803280001
46	Stop	FXW23242450015
47	Stop(B)	FXW23344470001