



Pos	Description	Art.code
1	Hex. Soc. Hd. Bolt	FXW30104140466
2	Bushing, Deflceptor	FXW20770000001
3	O-Ring	FXW30700081000
4	Deflector, Exhaust	FXW20770010115
5	O-Ring	FXW30700163000
6	Cap, Machined	FXW207700200XX
7	Locknut	FXW30604070066
8	Hex. Soc. Hd. Bolt	FXW30105250866
9	Cap Gasket	FXW20770130000
10	Piston Stopper	FXW20770140017
11	Spring	FXW20770160000
12	O-Ring	FXW30700092000
13	O-Ring	FXW30700091000
14	Piston ,Head Valve	FXW20770150000
15	Cylinder Seal	FXW20770180016
16	Seal	FXW20770250017
17	O-Ring	FXW30700117000
18A	Driver Assembly-Longer	FXW21320461301
19	O-Ring	FXW30700093000
20	Cylinder Spacer	FXW20770370000
21	O-Ring	FXW30700115000
22	Cylinder	FXW20770350100
23	Bumper	FXW20770470015
24	Driver Guide	FXW20770480001
25A	Body Assembly	FXW207706023XX
26	O-Ring	FXW30700185000
27	End Cap	FXW207707X04XX
28	O-Ring	FXW30700079000
29	O-Ring	FXW30700081000
30	Valve	FXW20770900016
31	O-Ring	FXW30700002000
32	O-Ring	FXW30700201000
33	O-Ring	FXW30700071000
34	Valve Plunger	FXW20770910016
35	Spring	FXW20770960001
36	O-Ring	FXW30700080000
37	Plunger	FXW22220920100
38	Plunger Cap	FXW20770930016
39	Spring Pin	FXW30803250001
40	Spring Pin	FXW30803220001
41A	Trigger Assembly	FXW22220952315
42	Guide, Contact Trip	FXW22222840215
43	Pin Trigger	FXW20770890101
44	Grommet	FXW30700078000
45	Upper Contact Trip	FXW22141480001
46	Adjusting Nut	FXW20771600066

Pos	Description	Art.code
47	Adjusting Post	FXW20771500101
48	Adjusting Spring	FXW20771630001
49	Steel Ball	FXW31200200000
50	E-Ring	FXW31303000001
51	Safety Spring	FXW20771490001
52	Lower Safety Post	FXW20771680101
53	Nose	FXW20771350366
54	Lower Door	FXW20771340166
55	Spring Pin	FXW30804200001
56A	Door Latch Assembly	FXW20771361066
57	Latch Grip	FXW20771380015
58	Spring Pin	FXW30804220001
59	Hex. Soc. Hd. Bolt	FXW30104100166
60	Magazine Cover	FXW20772200215
61	Spring	FXW20322090000
62	Spring Stopper	FXW20772310001
63	Magazine	FXW20772050115
64	Hex. Soc. Hd. Bolt	FXW31604100466
65	Nail Guide Liner	FXW20772070002
66	Roller Shaft	FXW20772120001
67	Pusher Guide	FXW20772150015
68	Spring	FXW20772290001
69	Pusher	FXW20772130066
70	Bracket	FXW20772170115
71	Hex. Soc. Hd. Bolt	FXW31604120166
72	Hex. Soc. Hd. Bolt	FXW31704180166
73	Washer	FXW30900001001
74	Rubber Pad	FXW20771580015
75	Bushing	FXW20772080001
76	Spacer	FXW20772300001
77	O-Ring	FXW30700042000
78	O-Ring	FXW30700136000
<b>Optional parts</b>		
79A	Belt Hook Assembly	FXW20970832515
79A-1	End Cap	FXW209707X03XX
79A-2	Belt Hook	FXW20970830115
79A-3	O-Ring	FXW30700188000
79A-4	Cover Belt Hook	FXW20970840101
79A-5	C-Ring	FXW33425000001