



FDMBF1850-2HOB

Pos.	Description	Part N°
01	SCREW	FXW18502H01
02	BUSHING	FXW18502H02
03	EXHAUST COVER	FXW18502H03
04	WASHER	FXW18502H04
05	SCREW	FXW18502H05
06	WASHER	FXW18502H06
07	CYLINDER CAP	FXW18502H07
08	GASKET	FXW18502H08
09	LENGTHEN RING	FXW18502H09
10	VALVE SEAL	FXW18502H10
11	VALVE SPRING	FXW18502H11
12	O-RING	FXW18502H12
13	O-RING	FXW18502H13
14	VALVE	FXW18502H14
15	O-RING	FXW18502H15
16	STOPPED WASHER	FXW18502H16
17	COLLAR	FXW18502H17
18	O-RING	FXW18502H18
19	O-RING	FXW18502H19
20	PISTON ASSEMBLY	FXW18502H20
21	CYLINDER	FXW18502H21
22	O-RING	FXW18502H22
23	O-RING	FXW18502H23
24	BUMPER	FXW18502H24
25	BODY	FXW18502H25
26	JOINT GUIDE	FXW18502H26
27	SAFE GUIDE	FXW18502H27
28	SPRING	FXW18502H28
29	SAFE BRACKET A	FXW18502H29
30	SAFE BRACKET B	FXW18502H30
31	SCREW	FXW18502H31
32	SAFE BRACKET C	FXW18502H32
33	RUBBER COVER	FXW18502H33
34	PIN	FXW18502H34
35	SEAL RING	FXW18502H35
36	TRIGGER VALVE HEAD	FXW18502H36
37	STEM SPRING	FXW18502H37
38	O-RING	FXW18502H38
39	O-RING	FXW18502H39

Pos.	Description	Part N°
40	TRIGGER VALVE GUIDE	FXW18502H40
41	O-RING	FXW18502H41
42	TRIGGER SPRING (SHORT)	FXW18502H42
43	TRIGGER SPRING	FXW18502H43
44	TRIGGER	FXW18502H44
45	SPRING PIN	FXW18502H45
46	WASHER	FXW18502H46
47	PIN	FXW18502H47
48	LATCH SLEEVE	FXW18502H48
49	LATCH ASSEMBLY	FXW18502H49
50	FRONT PLATE	FXW18502H50
51	PIN	FXW18502H51
52	PIN	FXW18502H52
53	SCREW	FXW18502H53
54	PLATE	FXW18502H54
55	SCREW	FXW18502H55
56	DRIVE GUIDE	FXW18502H56
57	MOVABLE MAGAZINE	FXW18502H57
58	LOCK SPRING	FXW18502H58
59	LOCK	FXW18502H59
60	LOCK PIN	FXW18502H60
61	FEEDER SHOE	FXW18502H61
62	FEEDER SEAT	FXW18502H62
63	SPRING	FXW18502H63
64	SPRING SEAT	FXW18502H64
65	STOPPED PLATE	FXW18502H65
66	SCREW	FXW18502H66
67	RAIL	FXW18502H67
68	PIN	FXW18502H68
69	FIXED MAGAZINE	FXW18502H69
70	STOPPED PIECE	FXW18502H70
71	SCREW	FXW18502H71
72	SUPPORT	FXW18502H72
73	SCREW	FXW18502H73
74	LOCK NUT	FXW18502H74
75	SOFT GRIP SLEEVE	FXW18502H75
76	END CAP	FXW18502H76
77	O-RING	FXW18502H77
78	AIR PLUG	FXW18502H78