



Pos	Description	Art.code
1	HEX.SOC.HD.BOLT	FXWP635B-001
2	CAP	FXWP635B-002
3	CAP GASKET	FXWA014G00
4	COMPRESSION SPRING	FXWA234200
5	VALVE STOP	FXWA144200
6	CYLINDER CAP	FXWP635B-006
7	O-RING	FXW401-1028
8	O-RING	FXW401-2012
9	O-RING	FXWP635B-009
10	HEAD VALVE	FXWP635B-010
11	O-RING	FXW401-3008
12	O-RING	FXWP635B-012
13	CYLINDER BUSHING	FXWP635B-013
14	O-RING	FXWP635B-014
15	DRIVER	FXWP635B-015
16	CYLINDER	FXWP635B-016
17	BUMPER	FXWP635B-017
18	GUN BODY	FXWP635B-018
19	DRIVER SEAL	FXWA034M00
20	O-RING	FXWP635B-020
21	DEFLECTOR	FXWA274G00
22	O-RING	FXW401-4.2*1.2
23	O-RING	FXW401-P90
24	TRIGGER VALVE SEAT	FXWA614200
25	TRIGGER VALVE STEM	FXWA634200
26	TRIGGER VALVE GUIDE	FXWA624200
27	TRIGGER SPRING	FXWA724200
28	PIN	FXWP635B-028
29	E-RING	FXW333-2.5
30	TRIGGER	FXWP635B-030
31	PIN	FXWP635B-031
32	SAFETY TRIGGER SPRING	FXWA824F00
33	SAFETY TRIGGER	FXWA814G00
34	PIN	FXWP635B-034
35	COUPLING PLUG	FXWP650033
36	NYLON NUT	FXWP635B-036
37	SUPPORT	FXWP635B-037
38	HEX.SOC.HD.BOLT	FXW305-4*6
39	SPRING WASHER	FXW321-4M0
40	HEX.SOC.HD.BOLT	FXWP635B-040
41	HEX.SOC.HD.BOLT	FXWP635B-041
42	COVER PLATE	FXWP635B-042
43	GUIDE PLATE	FXWP635B-043
44	MAGAZINE SEAT	FXWP635B-044
45	SPACER PLATE	FXWP650-065
46	RAILING PLATE	FXWP650-066

Pos	Description	Art.code
47	HEX.SOC.FLAT HEAD SCREW	FXW303-3*5.5
48	MAGAZINE CAP	FXWP635B-048
49	PUSHER STOP	FXWP635B-049
50	SPRING	FXWB724G00
51	PUSHER#1 (S)	FXWB264910
52	PUSHER#2 (L)	FXWB264920
53	PUSHER SPRING	FXWP650-060
54	PUSHER	FXWB614900
55	SLIDER CAP	FXWP635B-055
56	LATCH	FXWB714G00
57	HEX.SOC.HD.BOLT	FXW301-5*22+S
58	HEX.SOC.HD.BOLT	FXW305-3*6
59	WASHER	FXW320-3*8*1
60	SPRING PIN	FXW332-3*10
61	NOSE PROTECTOR	FXWA284G00
62	ALLEN WRENCH	FXW814-300
63	SILENCER	FXWA074G00
64	RUBBER PLATE	FXWB764G00
65	CRADLE	FXWP650037
66	PIN	FXW330-2.1*5
67	HANDLE GRIP	FXWP650034
68	HEX.SOC.HD.BOLT	FXW305-4*10